



TC56/TC57 & RFD8500

Antenna intensity & setup after pairing

Version 1.0 • December, 2022

1. Pairing the TC56/TC57 & RFD8500



To pair the devices on **TC56/TC57**, go to the **Bluetooth menu** (pull the device's top menu by swiping from the top of the device and press and hold the **Bluetooth icon** for a couple of seconds), tap on **PAIR A NEW DEVICE**. Make sure the **RFD8500** is blinking blue on the **Bluetooth button** (to make it blink, just press for a couple of seconds on that button) when the reader's serial number appears on the screen, tap on it and press the **RFD8500** trigger until it is paired (you will hear a beep and a confirmation box on the **TC56/TC57** screen)

2. Configuring the devices

Once paired, on the **TC56/TC57** go to the device's home screen and swipe up to reveal all apps.

1. On the top search bar, type **123RFID**
2. Open the app **123RFID**
3. Set the region to **USA** (if the region is already set, you can skip this step)
4. From the top left corner, tap on the menu and go to:
Settings > Advanced Reader Options > Antenna
5. On the first input, delete the previous number and type 10 (for intensity)
6. Go back to Advanced Reader Options and select **SAVE CONFIGURATION**. Make sure the **RFD8500** gun is on and paired and then press **SAVE**.
7. Now you can open the **Angelpaw App** and continue.